

CONNECTED CHEF™

KITCHEN TABLET + FOOD PREP STATION



 
QUICK START GUIDE

SCAN FOR



MORE INFO

BUTTONS ARE LOCATED ON THE DISPLAY END OF THE CONNECTED CHEF™ KITCHEN TABLET

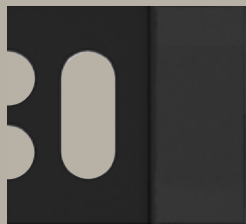

- Microphone
- Volume Down
- Volume Up
- Power
- USB-C Charging Port

Get Started

Connect the USB-C charging cable to charge the battery



Press the power button to start the Kitchen Tablet



Start-up approx. 30 seconds

SLEEP MODE Tap the power button once to enter sleep mode and tap again to wake.



POWER OFF & RESTART Press and hold the power button. Options to Power Off or Restart will appear on the screen.



Get Setup

Follow setup screens



We recommend you update the installed apps

How to update an Android app

Open the Google Play Store app.

At the top right, tap the profile icon.

Tap Manage apps & device. Apps with an update available are labeled "Update available."

Tap Update.

Android Help

visit

<https://support.google.com/android>

Google and Android are trademarks of Google LLC.



 
Get Connected

ROTATIONAL DISPLAY

Because every kitchen is different, the Connected Chef™ Kitchen Tablet display can be oriented whichever way suits you.

1. ENABLE SCREEN ROTATION

To turn rotation on or off, swipe down from the top of the Kitchen Tablet display and tap Auto-rotate.




if Auto-rotate button is not displayed, press



2. ROTATE THE KITCHEN TABLET

 Lift the Kitchen Tablet and rotate it so the display is oriented the way you want, then tilt the kitchen tablet forward. The display will rotate.

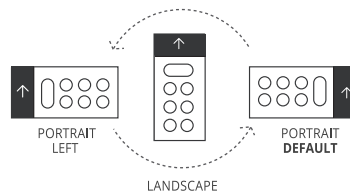


Please note: Some apps may not allow screen rotation.



CLEANING

HOW TO CLEAN THE KITCHEN TABLET DISPLAY

 
Wipe with a damp cloth



Do not submerge in water Not dishwasher safe


HOW TO CLEAN THE BAMBOO CUTTING BOARD

 Remove the Bamboo Cutting Board from the Kitchen Tablet base and hand wash.




Not dishwasher safe

 IN THE BOX



CONNECTED CHEF™ KITCHEN TABLET

 

BAMBOO CUTTING BOARD



110V/5V 2A POWER ADAPTER



2 METER (6.5 FT) USB-C CABLE

CONNECTED-CHEF.COM

Connected Chef™ is a trademark of Capstone Industries Inc.